


UNDERSIDE VIEW OF VALVE BASES

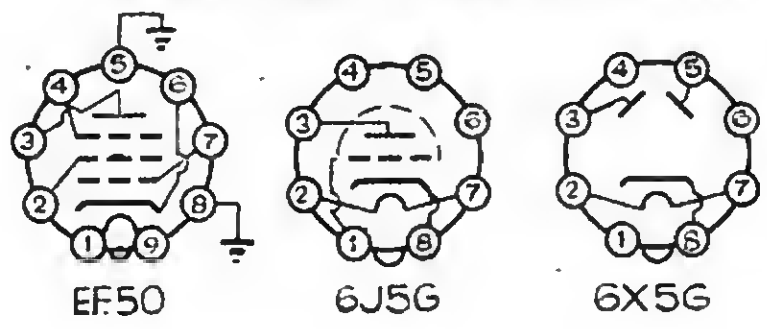

CIRCUIT CODE

R 1.	2200 ohms	$\frac{1}{4}$ W.	10%	R12.	180 ohms	$\frac{1}{4}$ W	5%
R 2.	82	..	5%	R14.	100
R 3.	750	R15.	82
R 4.	91	R16.	100,000 ohms	$\frac{1}{4}$ W	10%
R 5.	750	R.17	1000 ohms	$\frac{1}{4}$ W	10%
R 6.	91	R18.	27,000
R 7.	750	R19	1500
R 8.	91	R20.	1000
R 9.	750	R22.	100
R10.	91	R23.	750
R11.	100	R24.	3000

R13. 91 ohms wirewound non-inductive Potentiometer.

R21. 50,000 ohms carbon log law Potentiometer with switch.

C1.	.01 mfd. Mica.	C 9.	.05 mfd. paper tubular.
C2.	487 pf. max. variable.	C10.	4 mfd. electrolytic.
C3.	30 pf. ceramic.	C11.	4 mfd ..
C4.	.005 mfd. mica.	C12.	.001 mfd. mica.
C5.	.005 mfd. ..	C13.	.005 mfd. ..
C6.	40 pf. ceramic.	C14.	.005 mfd. ..
C7.	.005 mfd. mica.	C15.	.005 mfd. ..
C8.	.001 mfd. ..	C16.	.005 mfd. ..

S1.A. }
S1.B. } Ganged, wavechange.

S2. CW or Mod.
S3. Mains switch on R21.

L1. }
L2. } Coil pack.
L3. R.F. choke.
L4. R.F. choke.

L5. L.T. choke.
L6. L.T. choke.
L7. Mains filter choke.

T1. Modulation transformer. T2. Power transformer.